

WALL SWITCH GUARD

STOP ACCIDENTAL TURNING ON OR OFF WALL SWITCHES!!




- ◆ STOP accidental deactivation of security lights.
- ◆ STOP accidental activation of outdoor lights.
- ◆ STOP accidental activation of garbage disposal.
- ◆ STOP accidental activation or deactivation of other lights, motors, systems, or remote controllers.



Instead of ugly tape over the switch use an esthetically matching switch guard that is easily installed. Available in matching shades of existing wall switches.

No tools are required to install. Simply remove the adhesive backing, place the guard over the switch and press the guard against the switch plate.

Change switch position by sliding open the top door to gain access to the switch. **PATENTED**

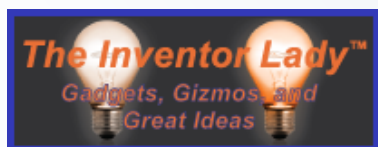

Contact Info:

Rita Crompton
303-910-8889

Rita@InventorLady.com
Www.InventorLady.com